


Glad Hand Lock

Installation and Use Instructions

This **Glad Hand Lock** has been made from top quality materials and is designed to provide years of service. This lock should be used as a part of an overall security program to prevent theft of property and cargo.


The lock is designed to fit both thread mount and base mount glad hand couplers. The latch plate on the coupler should be in good condition and not be bent or excessively worn.

To install the lock, slide the **Glad Hand Lock** onto the trailer air supply glad hand coupling and push the lock cylinder down until it clicks

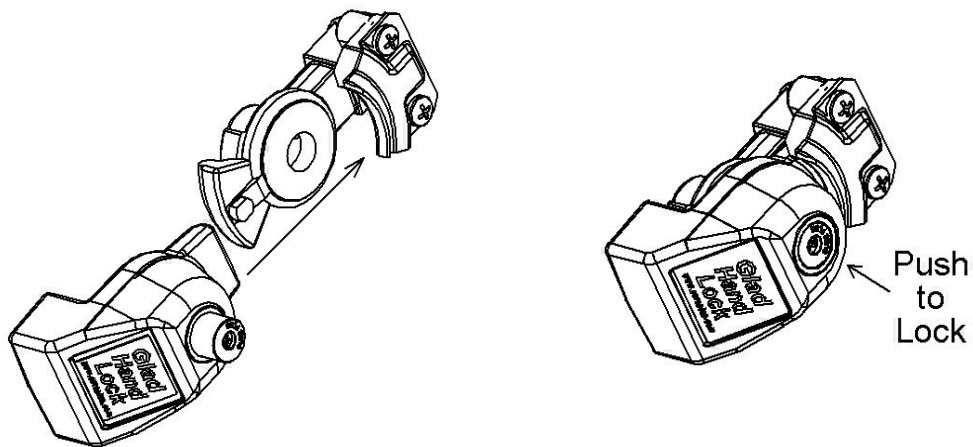

To remove the lock, insert the key into the lock cylinder and turn it clockwise approximately 3/4 turn to release the lock.

The **Glad Hand Lock** requires little maintenance. If the lock is exposed to the elements for a long period of time, it may be necessary to clean and lubricate the lock with a high quality lock lubricant such

as  available at www.mil-comm.com.